


## **Crate Assembly Instructions**






\*Milled Edge Perimeter\* \*2 Vertical Milled Edges\*







1. Identify boards and clip leg lengths.

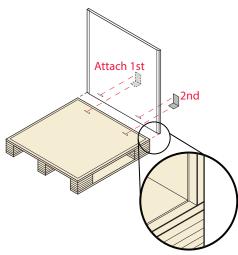


2. Attach end to base with clips.

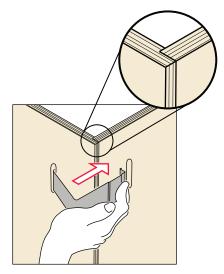


3. Attach clip so that the long leg spans across the edge of the overlapping board. Then, push the knee of the clip until it snaps into the slot.

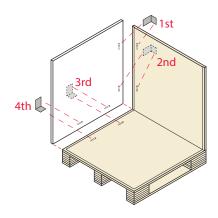


4. Attach side to end and base.

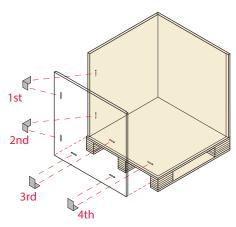


5. Attach end to side and base.

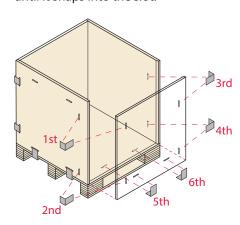

6. Attach side to both ends and base.

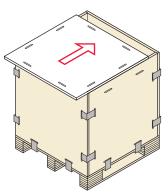


7. Fit top between the 2 sides and slide into place.

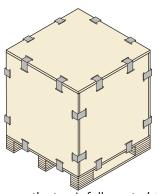

8. Be sure the top is fully seated, then attach with the remaining clips.

## Disassembly

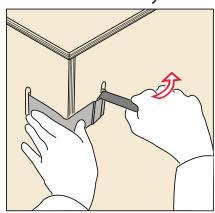

To remove clips, insert the removal tool into the raised pocket on the long leg of clip. Cover the clip with your hand and rotate the tool toward the center of the panel.



Always wear safety glasses when installing or removing clips. Always cover the clip with your hand when removing clips.