



General Frame Assembly Instructions

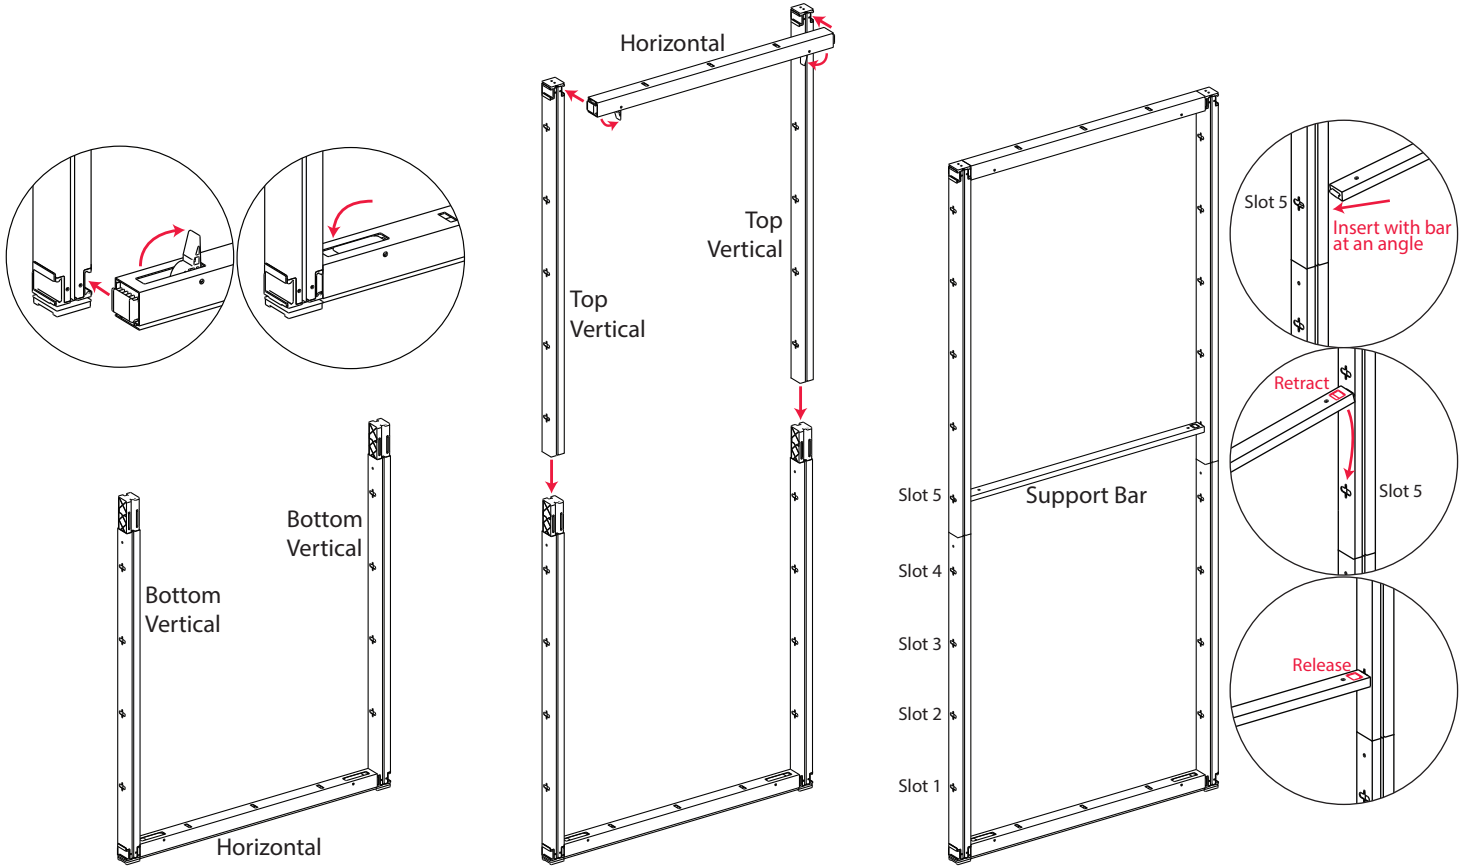

1. To connect the horizontal bars to vertical bars, lift the lock lever, slide the parts together, and close the lock lever.


2. Slide the top vertical bars over the bottom vertical bars. Attach the top horizontals and lock their levers.

3. Attach the support bar by inserting the non-spring-loaded end into the 5th slot on the left with the other end of the bar lifted. Retract the spring lock and lower the right side until it lines up with the right slot. Release the spring lock.

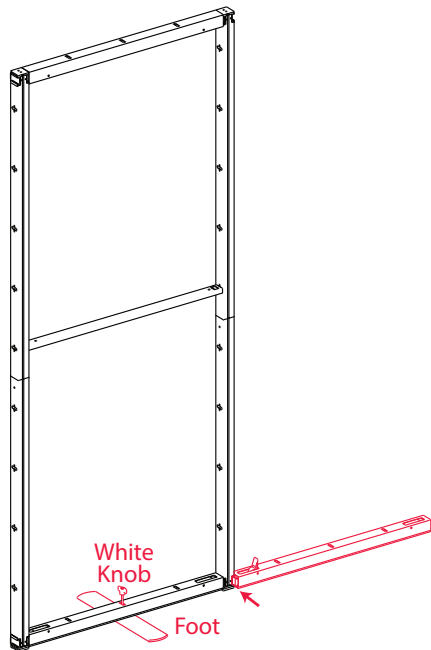

4. Where shown in the kit frame diagram, attach feet to the bottom of the frame with white knobs.

5. If building a longer wall, horizontal bars attach to the outside of the vertical bars. Lock the lever and continue building the frame.

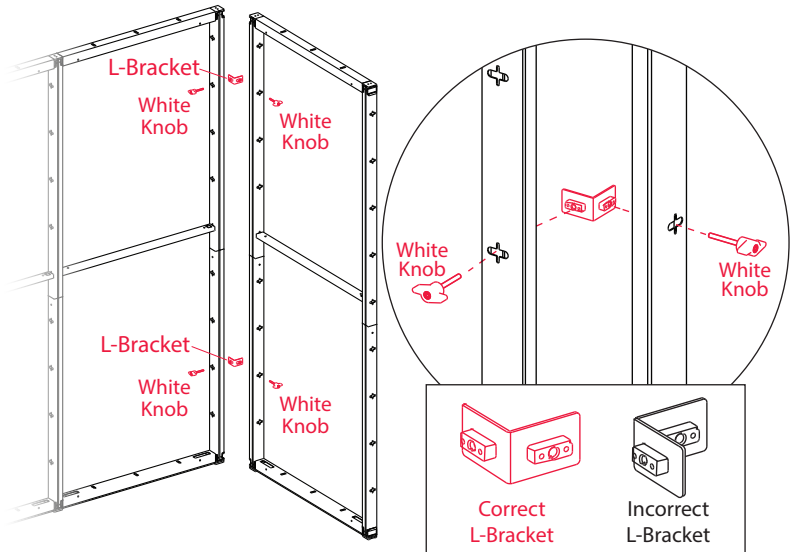

6. To form a corner, attach two L-brackets with white knobs. Note: Constructing a room requires a different L-bracket. See the room assembly instructions for details.